


Español

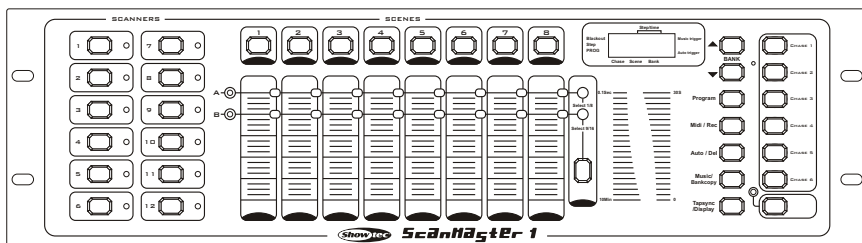

ScanMaster 1

Manual de usuario



Please read before use



ScanMaster 1

Improvement and changes to specifications, design and this manual, may be made at any time without prior notice.

All rights reserved.

Contenidos

Características 1

Instrucciones generales 2

1. Descripción 3

1.1 Vista frontal 3

1.2 Vista Trasera 6

2. Guía de uso 7

2.1 Activación de Programa 7

2.2 Programando Escenas 8

2.2.1 Edición de Escenas 11

2.2.2 Copia de Aparato 12

2.2.3 Copia de Escena 13

2.2.4 Borrar una Escena 15

2.2.5 Borrar todas las Escenas 15

2.2.6 Copia de Banco 16

2.3 Programando Chases 17

2.3.1 Programar un banco de escenas en un chase 18

2.3.2 Añadir un paso 18

2.3.3 Borrar un paso 20

2.3.4 Borrar un chase 21

2.3.5 Borrar todos los chases 21

2.4 Reproduciendo escenas 22

2.4.1 Modo Manual 22

2.4.2 Auto Mode 22

2.4.3 Modo Music 24

2.5 Reproduciendo chases 25

2.5.1 Modo Manual 25

2.5.2 Modo Auto 25

2.5.3 Modo Music 26

2.6 Control MIDI 27

2.6.1 Ajuste del canal MIDI 27

2.6.2 Aplicación 28

Especificaciones técnicas 29

Features

Thank you for your purchase. This product features include:

- 192 DMX channels, 12 scanners of 16 DMX channels
- 30 banks of 8 programmable scenes
- 6 chases of 240 programmed scenes from 30 banks
- 8 faders for manual control
- Chasing speed and Fade Time of Auto programs(scenes and chases) under control
- Fade Time control over all DMX channel
- Blackout master
- Manual override
- Built-in microphone for Music triggering
- MIDI control over banks, chases and Blackout
- Power failure memory

NOTE:

A knowledge of MIDI and DMX is required to fully utilize this unit.

General Instructions

Read the instruction in this manual carefully and thoroughly, as they give important information regarding safety during use and maintenance. Keep this manual with the unit, in order to consult it in the future. If the unit is sold or given to another operator, make certain that it always has its manual, to enable the new owner to read about its operation and relative instructions.



Warnings

- **DO NOT** make any inflammable liquids, water or metal objects enter the unit.
- Should any liquid be spilled on the unit, **DISCONNECT** the power supply to the unit immediately.
- **STOP** using the unit immediately in the event of serious operation problems and either contact your local dealer for a check or contact us directly.
- **DO NOT** open the unit--there are no user serviceable parts inside.
- **NEVER** try to repair the unit yourself. Repairs by unqualified people could cause damage or faulty operation. Contact your nearest dealer.



Cautions

- This unit is **NOT** intended for home use.
- After having removed the packaging check that the unit is **NOT** damaged in any way. If in doubt, **DON'T** use it and contact an authorized dealer.
- Packaging material (plastic bags, polystyrene foam, nails, etc.) **MUST NOT** be left within children's reach, as it can be dangerous.
- This unit must only be operated by adults. **DO NOT** allow children to tamper or play with it.
- **NEVER** use the unit under the following conditions:
 - In places subject to excessive humidity.
 - In places subject to vibrations or bumps.
 - In places with a temperature of over 45°C/113°F or less than 2°C/35.6°F.Protect the unit from excessive dryness or humidity (ideal conditions are between 35% and 80%).
- **DO NOT** dismantle or modify the unit.

